




## **RIFLE BASIX**

Replacement Trigger Systems

Phone: (704) 499-3087 • Fax: (704) 573-3768 • PO Box 49064 • Charlotte, NC 28277

### **INSTRUCTION SHEET FOR WEATHERBY & MOSSBERG TRIGGERS**

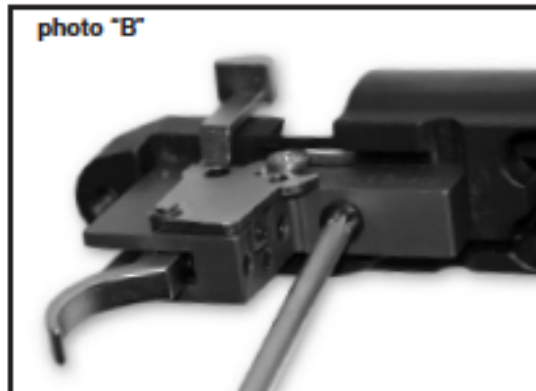

**WARNING! ANY bolt action firearm with a live round in the chamber and the safety in the "SAFE" position, is an accident waiting to happen! A safe firearm is achieved through safe HANDLING techniques. At the very least, a firearm with a live round in the chamber, should have the bolt handle in the full upright position, unloading the firing pin spring. NEVER trust a mechanical safety with a live round in the chamber! PLEASE FOLLOW INSTRUCTIONS IN PROPER NUMERICAL SEQUENCE.**

- 1) Remove bolt from receiver, and remove barreled action from stock. Note assembly of magazine box, floor plate and follower spring.
- 2) Remove trigger from receiver (photo "A").
- 3) Install new Rifle Basix trigger (photo "B").
- 4) Re-install bolt in receiver, confirm operation of trigger and safety. **DO NOT RE-ADJUST TRIGGER... DO NOT TURN ANY SCREWS.**
- 5) WTHBY-1 and MOSS-1 are factory pre-adjusted to break at 2 - 2.5 lbs. WTHBY-V and MOSS-V are factory pre-adjusted to break at approx. 14 oz.
- 6) If you PERCEIVE trigger needs re-adjusting, remove barreled action from stock, confirm firearm is UNLOADED, have 5/64" and 1/16" allen hex wrenches and CALL.

Design of Rifle Basix trigger will provide light pull trigger operation, and will require firearm to be handled with care. ALWAYS close bolt slowly and carefully. Keep firearm pointed in a safe direction when loading and unloading, and when operating bolt and safety.

***Always handle your rifle with care. Close bolt slowly and carefully while keeping your rifle pointed in a safe direction.***